KIND Teleprompter User Manual

一、Product Overview

KIND Mic Stand is a professional, simple and efficient mic equipment, suitable for various scenarios such as short video shooting, voice-over recording, live product promotion, speech recitation, interview recording, etc. The software supports automatic text scrolling, mirror flipping, full-screen mic display, font speed adjustment, local text saving, etc. It is easy to operate, free of ads, with a clean interface, and can effectively solve problems such as forgetting lines during shooting, repeated re-shooting, and unclear lines of dialogue.

二、Main Function Introduction

1. Copywriting Editing and Local Storage

- Support manual input, pasting of long passages of dialogues, speeches, and on-air copywriting.
- One-click save the text to the local storage of your mobile device. Restarting the APP will automatically restore the content.
- No need for repeated copying and pasting. Long-term stable preservation of the copy.

2. Automatic scrolling caption function

- Click "Start" and the dialogue will automatically scroll upwards at a constant speed.
- Support the ability to pause at any time and reset to the top.
- It will automatically stop at the bottom and avoid unnecessary scrolling.

3. Custom parameter adjustment

- **Rolling speed: Supports free adjustment for both slow speech and fast narration.**

- **Font size: Supports size adjustment, suitable for both close-up and distant shooting distances.**
- **Line spacing adjustment: Solves the problems of crowded text and eye fatigue during reading.**
- **Font color change: White, Green, Yellow. Suitable for indoor and bright outdoor environments.**

4. Full-screen immersive script display

- One-click to enter full-screen mode, hiding the status bar, editing bar and extra buttons.
- Pure black background, full-screen large text, professional and clean shooting image
- Support the ability to exit full-screen mode at any time, with simple and convenient operation.

三、Standard Usage Tutorial

Step 1: Input script

Open the software and paste or manually enter the lines to be filmed in the text box.

Step 2: Save script

Click the save button to cache the script locally. It will be automatically loaded the next time you open the software.

Step 3: Set prompt parameters

Adjust the font size, scrolling speed, and text color according to the shooting environment; turn on "Mirror Flip" for front-facing self-takes.

Step 4: Enter full-screen mode

Click the full-screen button to enter the pure prompt interface.

Step 5: Start filming the prompt

Click "Start Scrolling" to start filming. You can pause or reset at any time.

The method of switching languages in the prompter:

1、Open the main menu as shown in the picture.




2、Press the settings button to enter the settings menu, as shown in the figure.




3、After reaching the end, select the sixth item from the bottom as shown in the figure.




4、Select the first option "Language" as shown in the figure.

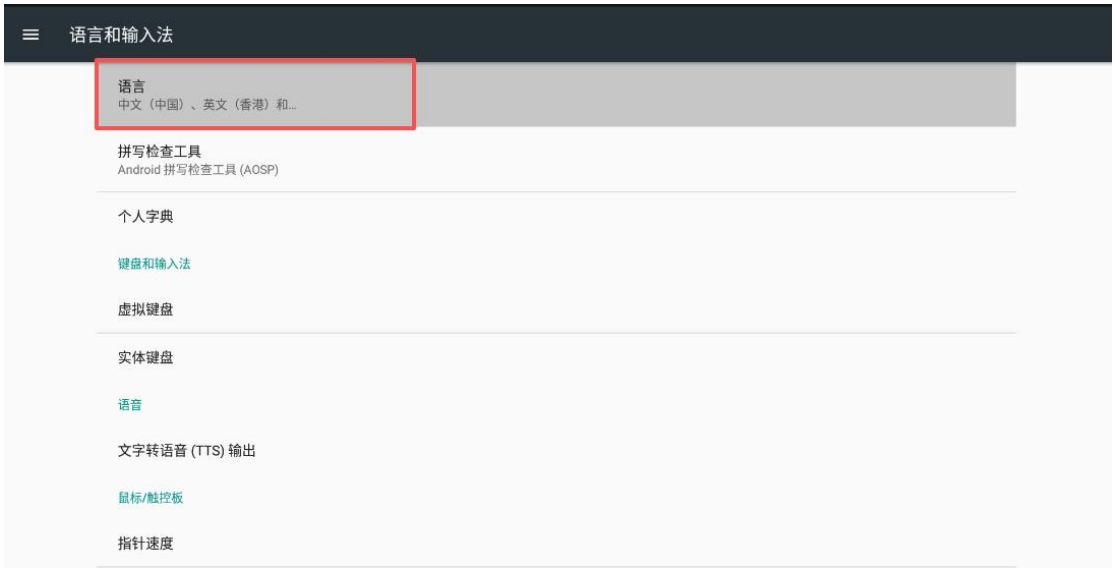


5、After entering the language preference settings interface, select the last option to add a language.

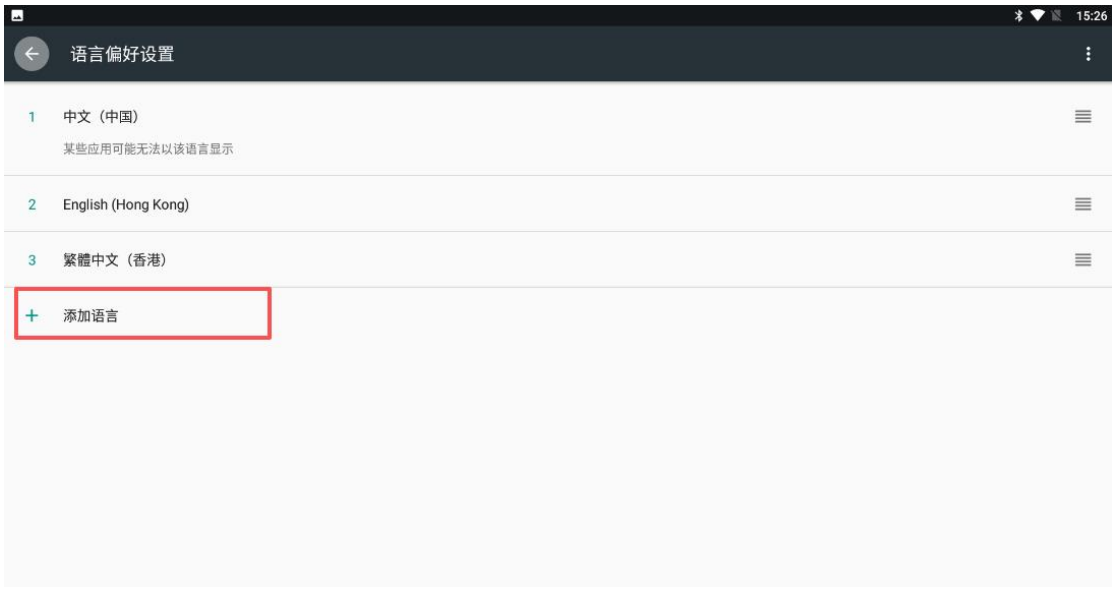

6、Select the language you need, then click the left mouse button. The interface will automatically jump to the language preference setting interface.

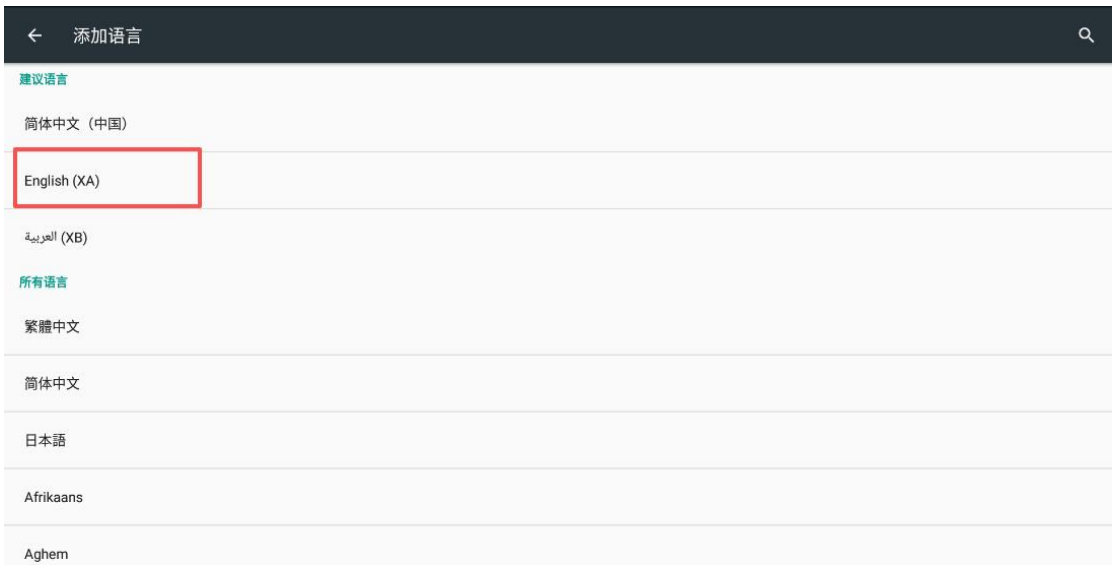

7、After seeing the language you have chosen, drag the selected language to the first item (drag the four lines behind the language to the first option as shown in the figure)

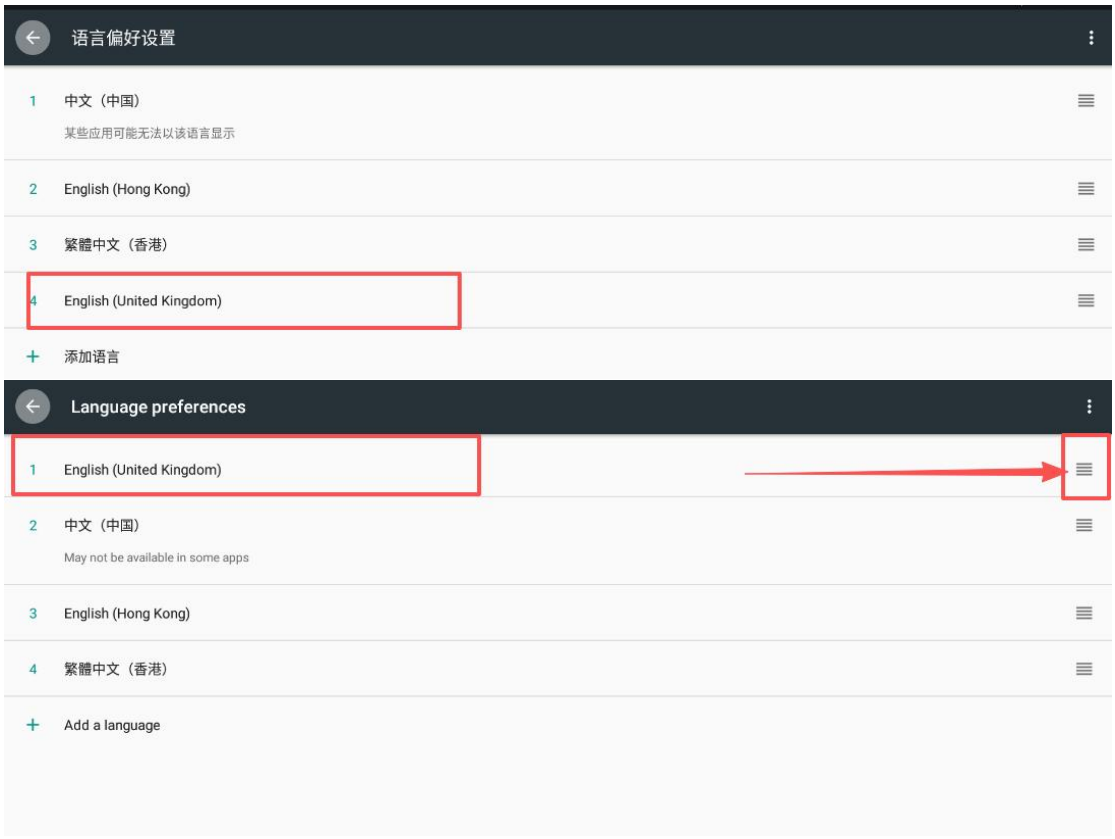

8、Change successful

Frequently Asked Questions Answered

Q1: Do the texts disappear after exiting the software?

A: Before using it, manually click the save button, and the text will be permanently saved locally.

Q2: Is the scrolling speed too fast or too slow?

A: Adjust it freely using the speed slider. The larger the number, the faster the scrolling.

Q3: Can't see the text outdoors?

A: Switch to the yellow or green font and increase the font size.

Q4: Is there a lag in scrolling?

A: Slow down the scrolling speed and close unnecessary background apps on your phone.

Usage Notes

- **This prompter runs locally and does not upload user content. It protects the privacy of the content.**
- **For extremely long content, it is recommended to use it in segments for a smoother experience.**
- **If you don't use it for a long time, it is suggested to manually save the important content to avoid accidental deletion.**



1. Detailed description of button functions (corresponding to the numbers in the diagram)

Button 1: Import

Core Functions: Rapid access to local assets and the script import interface; activate "Air Mouse" mode upon entering the interface.

Usage Scenario: Quickly import teleprompter scripts (Word, TXT, PPT, etc.) before filming; open the file selection window with a single click, and exit mouse mode after making your selection. Press the button again to return to the teleprompter interface.

Button 2: Mouse (Mouse mode toggle key)

Core functions: Toggle air mouse cursor mode on/off; mode switching switch.

Pattern logic：

1. Disable: Standard teleprompter control mode;

2. Enable Air Mouse mode: The remote control switches to an air mouse, allowing you to move the cursor, click, select text within the teleprompter software, and operate software menus and windows;

Usage scenario: Once enabled, you can control the on-screen mouse pointer from a distance to precisely select script sections, highlight text for editing, adjust software windows, and modify interface parameters—effectively replacing a wired mouse for controlling the host computer's screen. Press the "Mouse" button again to exit mouse mode after use.

Button 3: Play/Stop (Play/Pause center button)

Prerequisite: "Mouse mode" must be disabled.

Core function: Controls the start and stop of the teleprompter text scrolling.

Use cases: One-touch activation of text scrolling during broadcasts or speeches, and pausing the text mid-stream; this is the most frequently used core button in daily operation.

Button 4: Slow (deceleration button)

Core Function: Reduces the scrolling speed of the teleprompter text.

Use Cases: Ideal for slower speaking paces, reading long sentences, broadcasts by older adults, and practice sessions for beginners; it lowers the scroll rate, resulting in smoother text movement.

Button 5: Fast (Speed-up key)

Core feature: Increases the scrolling speed of the teleprompter text.

Use cases: Suitable for fast-paced speaking, short-form video monologues, and rapid news updates; accelerates the text scrolling pace to match the speaking speed.

Button 6: Page Up

Core Function: Jump up one full page of the document;

Use Cases: Quickly review previous sections of long documents, switch to the preceding paragraph, or jump to the content of the previous page with a single click—eliminating the need for slow scrolling.

Button 7: Page Down

Core function: Jump down by a full page of text;

Use cases: Quickly previewing the continuation of long documents, switching to the next paragraph, or skipping the current page to read the next one directly.

Button 8: Back (Back button)

Core functions: Return to the previous screen / Exit the current window / Return to the desktop;

Use cases: Close the import pop-up, exit the settings page, or return to the main software interface or desktop.

Button 9 : Menu

Core Function: Open the teleprompter software's global settings menu and activate "air mouse" mode to configure settings.

Usage Scenario: Adjust settings such as font size, font style, text color, line spacing, character spacing, background color, and reading guide position; press the button again to return to the teleprompter interface.

Button 10 : Text (Font size adjustment key)

Upward triangle: Increase the font size of the teleprompter text;

Downward triangle: Decrease the font size of the teleprompter text;

Use cases: Adjusts to camera-to-subject distance, large or small screens, and long-distance viewing needs; quickly resize the script font with a single tap to ensure the text remains clear and legible on camera.

Button 11 : VOL (Volume up/down buttons)

“+”: Increase system/playback volume;

“-”: Decrease system/playback volume;

Button 12 Exit clock menu (Exit Clock Menu Button)

Prerequisite: Launch the KIND clock application beforehand.

Core Functions: Activate "Air Mouse" mode and use the cursor to click the clock interface to reveal the clock settings buttons. Use the "slow" and "fast" keys to adjust the clock size, and the "Page Up" and "Page Down" keys to adjust the clock's transparency. Once settings are complete, press the "Exit clock menu" key to exit the menu.

Usage Scenario: Press this key to exit the menu after adjusting the clock size and transparency.